





Plastika
GROUP

MOULDINGS AND CORNICES

When installing 16ft mouldings, apply pressure (pressure-fit) to adjust. Position the dentil or design pattern carefully, to avoid overlapping.

- 1- Press-fit (or clamp) installation.
- 2- 45 degree angle joint installation.

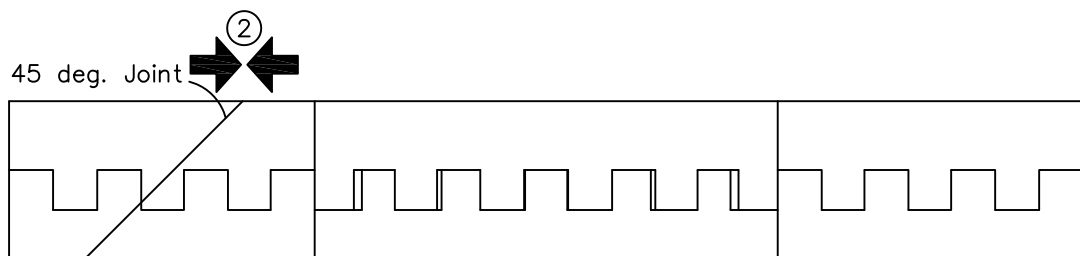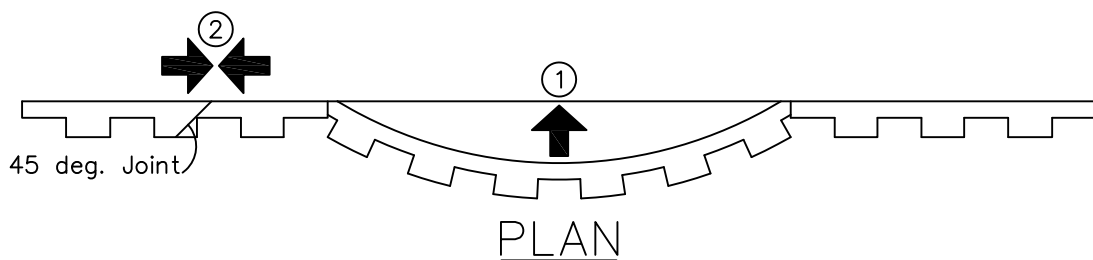

FRONT ELEVATION