Installation Guide - Columns 1293 & 1293-U

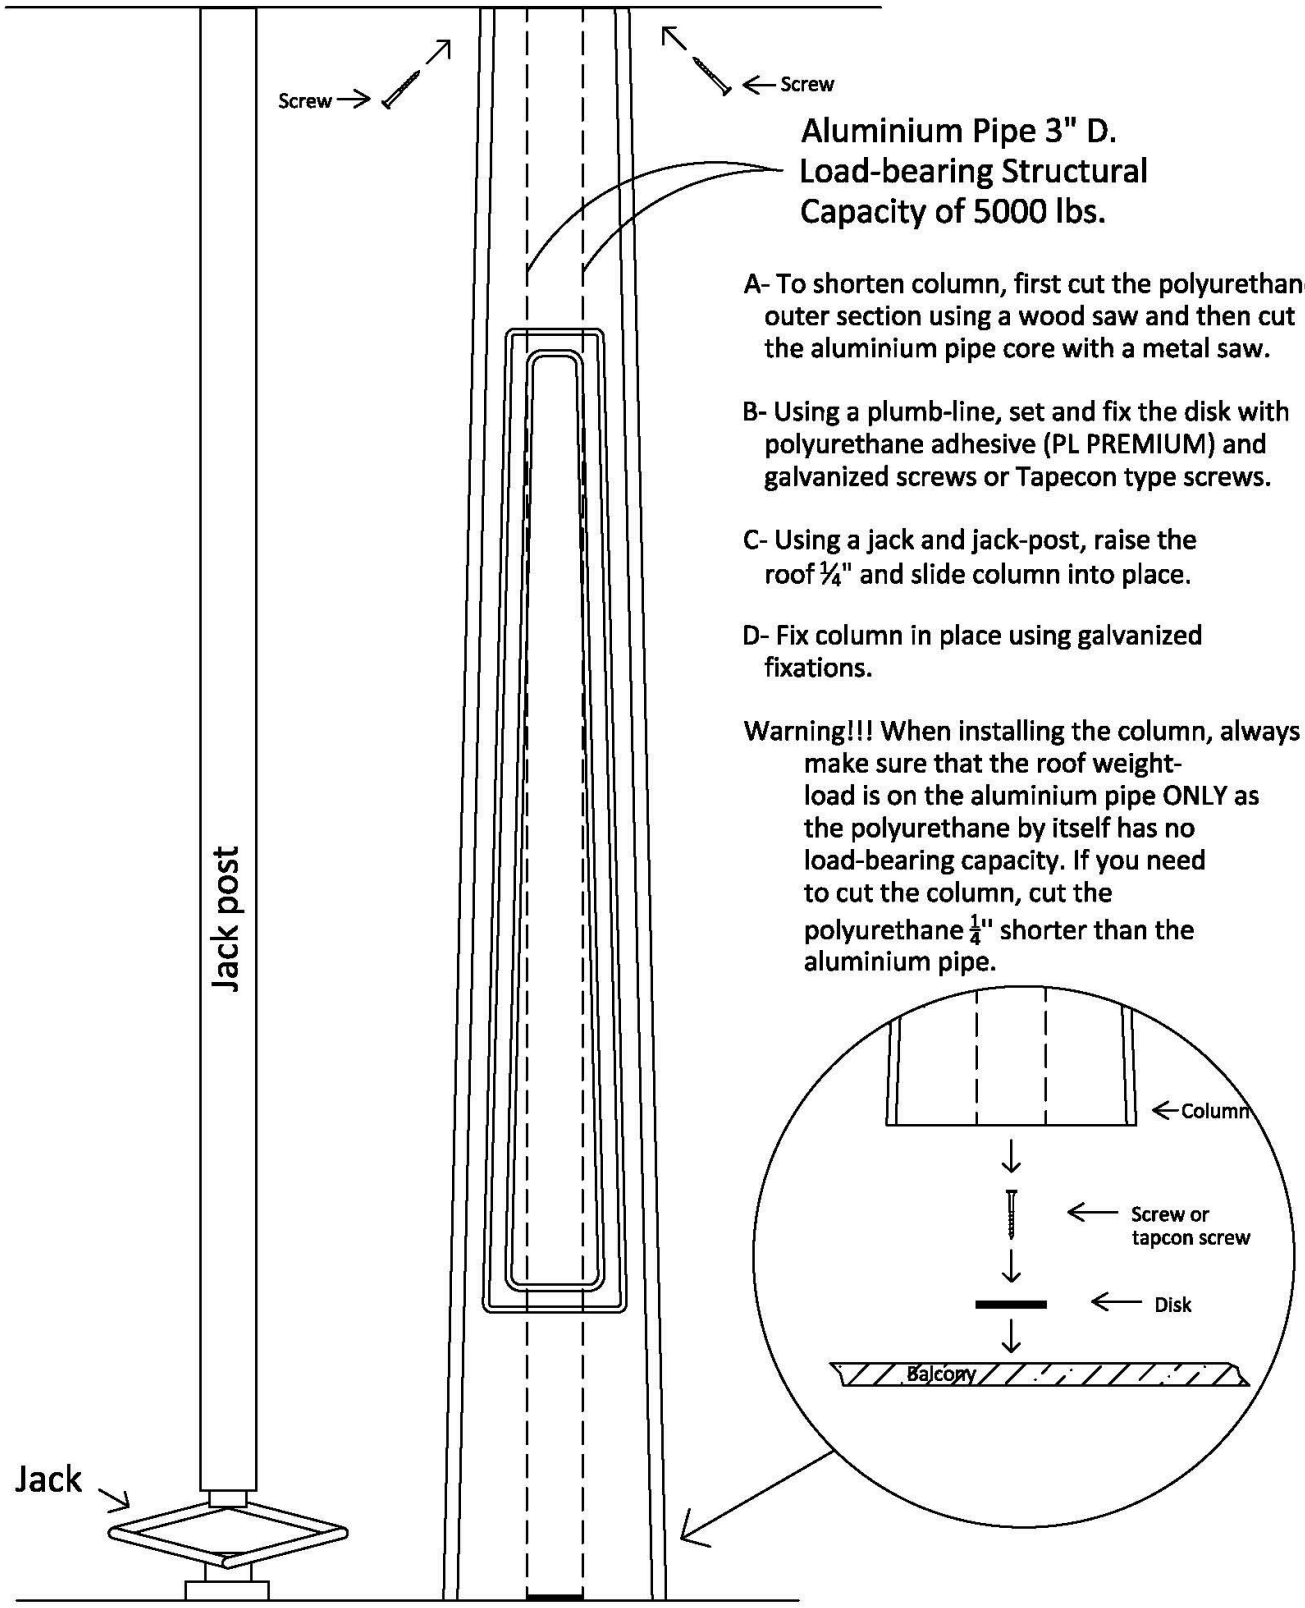

A- To shorten column, first cut the polyurethan outer section using a wood saw and then cut the aluminium pipe core with a metal saw.

B- Using a plumb-line, set and fix the disk with polyurethane adhesive (PL PREMIUM) and galvanized screws or Tapecon type screws.

C- Using a jack and jack-post, raise the roof ¼" and slide column into place.

D- Fix column in place using galvanized fixations.

Warning!!! When installing the column, always make sure that the roof weight-load is on the aluminium pipe ONLY as the polyurethane by itself has no load-bearing capacity. If you need to cut the column, cut the polyurethane $\frac{1}{4}$" shorter than the aluminium pipe.